



Minimalist Design Italian Lock Ecological Door Lock Magnetic Lock Body Indoor Wooden Bathroom Door Lock



[View Details](#)

Introduction

Minimalist Design Italian Lock Ecological Door Lock Magnetic Lock Body Indoor Wooden Bathroom Door Lock Door margin: 60mm Suitable for door thickness: 32-51mm Finish:SN ,SSS, Black (10B), AC,AB

Classification

door hardware->Door lock->Lever Door Locks

Attributes

- Brand: ECH
- Model: TLL-023

Product Description

Product

Minimalist Design Italian Lock Ecological Door Lock Magnetic Lock Body Indoor Wooden Bathroom Door Lock

Cover: optional with diameters of 55MM and 65MM

Model:TLL-023

key: 3 nickel plated copper key

Grade: ANSL level 3 standard gate

Gusset plate: 304 stainless steel

Material: zinc alloy

Door latch box: high-grade rubber

lock core: leaf lock core

Face treatment: SN,SSS, Black (10B), AC,AB, etc

Door margin: 60MM

Functions: room locks, sanitary locks, access locks, decorative handles, etc

Suitable for door thickness: 32MM- 51MM

Screw: 4 stainless steel 304 screws

Locking tongue: 60MM and 70MM adjustable

Warranty period: 5 years mechanical function warranty

General specification

Type	Lever door lock
Model NO	TLL-023
Brand name	ECH
Materal	Zinc Alloy
Finish	SN or to order

Product Picture :















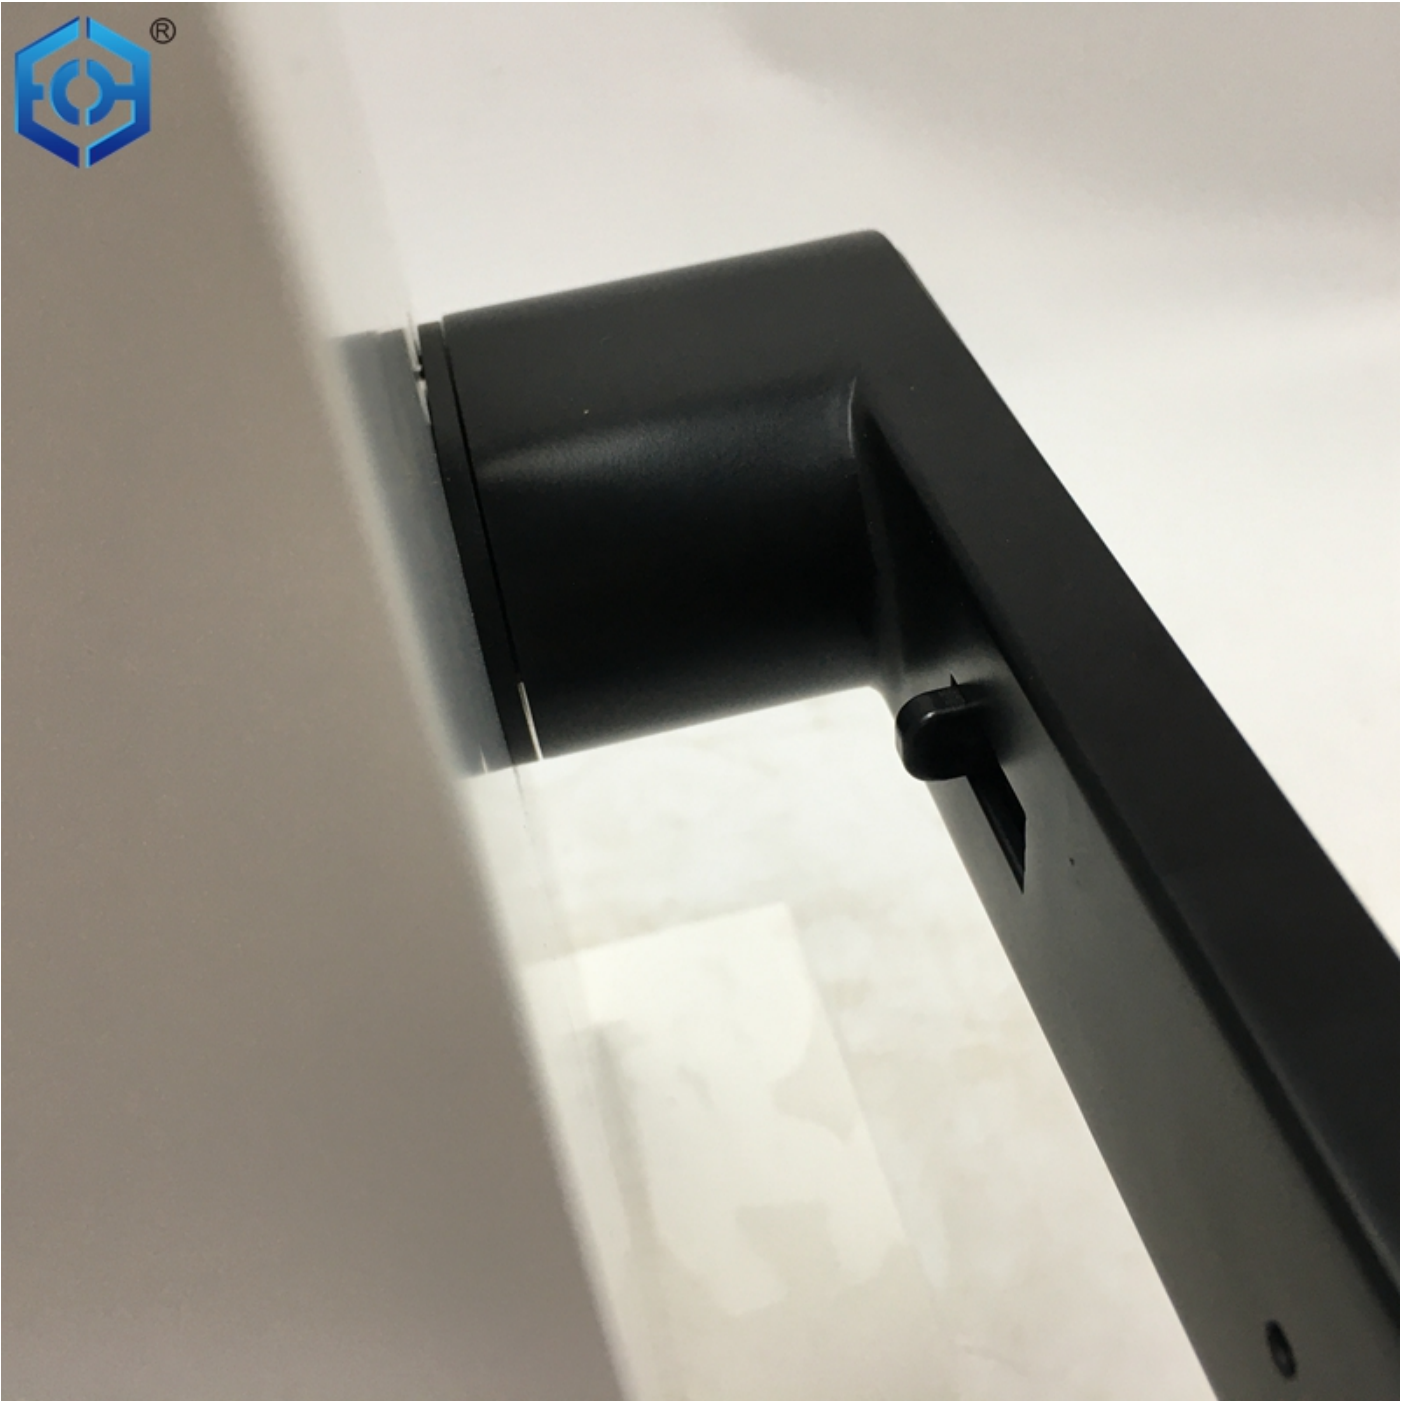

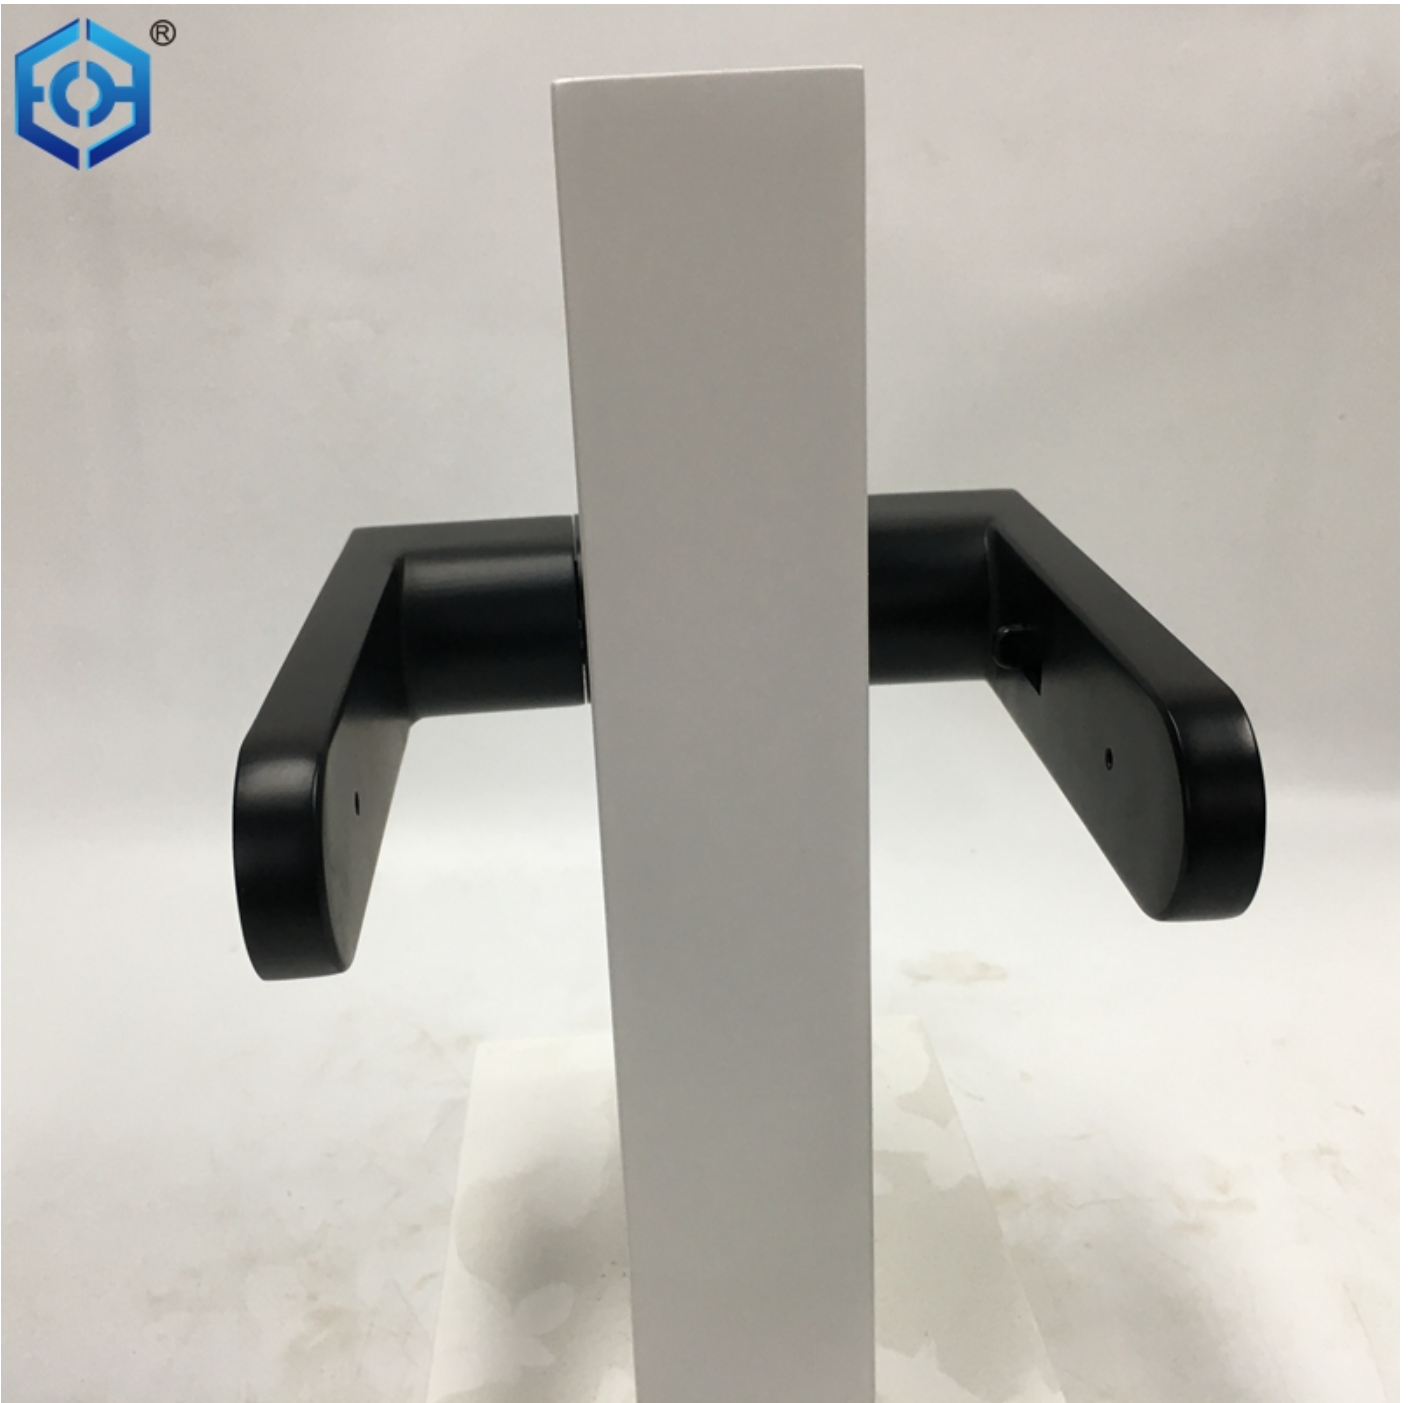

Packaging

Packaging design: white box and color optional, customizable packaging design.

Unit gross weight: 1.20kg/box.

Unit net weight: 1KG/ piece.

Packing details: 20 pieces/per carton

Inner box size: 18CM* 15.50cm *7CM

Case size: 38CM*33CM*37CM

Product features and installation instructions



ET :

WITH THE
KEY



BK :
WITH
SANITARY
INDICATION
No KEY



PS :
No LOCK
No KEY


INSTALLATION INSTRUCTIONS

1. Measure desired height from door, 1 meter from the ground is recommended.
2. Mark centerline on both faces and edge of door
3. Mark and drill a diameter hole $\varnothing 25.4\text{mm}$ for latch, $58\text{mm} \times 26\text{mm} \times 4\text{mm}$ for Armor front. **Note : Make sure the slot to be vertical to the door face.**
4. To prevent damaging doors, Drill a 48mm through-hole halfway from each side of door.
5. Install the latch into the hole and tighten the two mounting screws then screw the armor front. **Note : Make sure the hole to be vertical to the door face.**
6. Using two strike mounting screws, install strike into doorjamb.
7. Before the installation, be sure to remove the key if the entrance lock is being installed.
8. After installation, try to use both keys and lever to identify the hook in the lock case if move in and out smoothly.

Key In Lever Lock



TEMPLATE

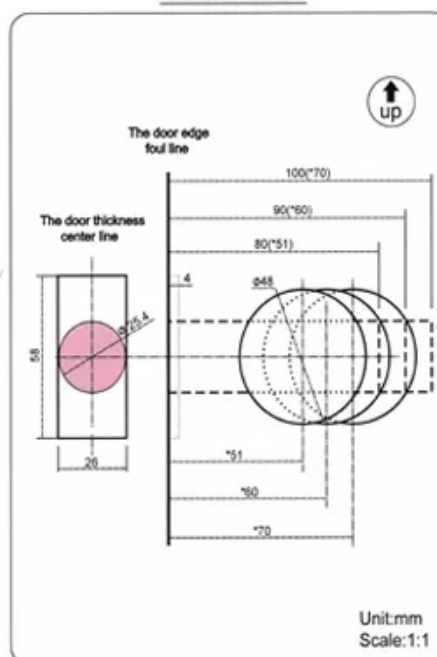

Related Products